



WELDING POSITIONER'S OPERATION MANUAL

WP SERIES

OVERLOAD OR MISUSE of a WELDING POSITIONER WILL VOID THE WARRANTY and may cause PROPERTY DAMAGE, BODY INJURIES OR DEATH. Overload a Welding Positioner could damage components without the damage being visible; therefore an overloaded welding positioner could eventually fail at any given time without previous notice, even when positioner is not fully loaded at moment of the failure. Before operating read carefully and understand the information below. If you have any questions or concerns, please contact us @ 1 877 IRIZAR1 or jirizar@jirizar.com

Revision	March	22	2017
----------	-------	----	------

Note: The information contained in this manual is intended to be accurate. However the manufacturer retain the rights to make changes in design which may not be include herein.



IRIZAR HEAVY INDUSTRIES INC

1512 Adamson View, Edmonton, Alberta, T6W 0V4, Canada

P: 1 780 450 6695, F: 1 780 485 6677

E mail: jirizar@jirizar.com, Website: www.jirizar.com



Table of Content

1.0	Welding Positioners Description	3
	<i>Welding Positioner WP Series</i>	3
	WP Specifications	4
	WP Capacity Chart	4
2.0	WP and CWP Selection Procedure	5
3.0	Installation Instructions	6
	<i>Remote Control Box Operation</i>	8
	<i>Foot Control Pedal Operation</i>	8
	<i>Main Control Box Operation</i>	8
4.0	Lubrication and Preventive Maintenances	9
5.0	Warnings	9
6.0	Troubleshooting Procedures	10
	<i>Procedure to Re-Setting VFD (N2-200/400)-Late Edition</i>	10
	<i>Procedure to Re-Setting VFD (MA7200) –Current Edition</i>	11
	<i>Procedure to Re-Installing VFD (MA7200) to Late Edition Control Box</i>	12
	<i>Procedure to Calibrate Readings on Remote Control Box Digital Display</i>	13
7.0	Spare Parts	14
	<i>WP Exploded View</i>	14
	<i>WP Electrical Components</i>	15
8.0	Technical Drawings	16
	<i>Foundation for WP 0.3, WP 0.6 and WP 1</i>	16
	<i>Foundation for WP 3, WP 5 and WP 10</i>	17
	<i>WP-Series Electrical Principle Diagram</i>	18
9.0	Load Capacity Chart	19
10.0	Limited Warranty	22

ASK FULL OPERATION MANUAL

jirizar@jirizar.com