



WELDING ROTATOR'S OPERATION MANUAL

WR/SAR SERIES

OVERLOAD OR MISUSE of a WELDING ROTATOR WILL VOID THE WARRANTY and may cause PROPERTY DAMAGE, BODY INJURIES OR DEATH. Overload a Welding Rotator could damage components without the damage being visible; therefore an overloaded welding rotator could eventually fail at any given time without previous notice, even when rotator is not fully loaded at moment of the failure. Before operating read carefully and understand the information below. If you have any questions or concerns, please contact us @ 1 877 IRIZAR1 or jirizar@jirizar.com

Revision	March	22	2017
----------	-------	----	------

Note: The information contained in this manual is intended to be accurate. However the manufacturer retain the rights to make changes in design which may not be include herein.



IRIZAR HEAVY INDUSTRIES INC

1512 Adamson View, Edmonton, Alberta, T6W 0V4, Canada

P: 1 780 450 6695, F: 1 780 485 6677

E mail: jirizar@jirizar.com, Website: www.jirizar.com



Table of Content

1. Rotators Description	3
<i>Conventional Welding Rotators (WR)</i>	3
<i>Self-Aligned Rotators (SAR)</i>	3
2. Installation Instructions	4
<i>Conventional Welding Rotators (WR)</i>	4
<i>Pipe Rotators (PR-1)</i>	7
<i>Self-Aligned Rotators (SAR)</i>	8
<i>Remote Control Box Operation WR and SAR Series</i>	11
<i>Foot Control Pedal Operation WR and SAR Series</i>	11
<i>Main Control Box Operation WR and SAR Series</i>	11
3. Lubrication and Preventive Maintenances	12
3. Warnings	14
4. Troubleshooting Procedures	15
<i>Procedure to Re-Programing VFD (N2-200/400)</i>	15
<i>Procedure to Re-Programing VFD (A105)</i>	16
<i>Procedure to Re-Programing VFD (MA7200)</i>	15
<i>Procedure to Re-Installing VFD (MA7200, N2, and A510) to Control Box</i>	17
	18
5. Spare Parts	19
<i>WR (WR3-WR80) Series Exploded View</i>	19
<i>IR (IR3-IR80) Series Exploded View</i>	19
<i>SAR (SAR5-SAR100) Series Exploded View</i>	20
<i>ISAR Series Exploded View</i>	20
<i>WR 1200 Exploded View</i>	21
<i>IR 1200 Exploded View</i>	21
<i>WR/SAR Electrical Components</i>	22
6. Irizar Synchronizing Device Installation	22
7. Technical Drawings and Tables	23
<i>WR-Wheel Center-Center Distance vs. Diameter of Work Piece</i>	23
<i>WR-Series Electrical Principle Diagram</i>	24
<i>SAR-Series Electrical Principle Diagram</i>	24
<i>WR/SAR Synchronizing Device Electrical Principle Diagram</i>	25
<i>WR 600-1200 Installation and Levelling Guidelines</i>	26
8. Limited Warranty	28

ASK FULL OPERATION MANUAL

jirizar@jirizar.com