

IRIZAR HEAVY INDUSTRIES INC Head Office: 1512 Adamson View, Edmonton, Alberta T6W 0V4, Canada Factory: 464014 RR 235, County of Wetaskiwin, AB, T0C 1Z0, Canada Phone: 1 780 450 6695, Fax: 1 780 485 6677 Email: jirizar@jirizar.com Website: www.jirizar.com



TANK LIFTING JACKS OPERATION MANUAL

LIMITED WARRANTY is valid: 1) If the buyer/user holds <u>IRIZAR TANK LIFTING CERTIFICATE</u>. Our company is not liable for any misuse or accident caused by inappropriate selection of the number of jacks required for lifting a tank. 2) If the tank lifting jacks are installed and operated accordingly to the LATEST OPERATION MANUAL. 3) If the tank lifting jacks are operated by personnel holding an update <u>IRIZAR TRAINING CERTIFICATE</u>. Failure to comply with the above conditions will <u>VOID THE</u> <u>WARRANTY</u> and may cause PROPERTY DAMAGE, BODILY INJURIES OR EVEN DEATH. If you have any questions or concerns, please contact us @ 1 780 450 6695 or jirizar@jirizar.com

IRIZAR TANK LIFTING CERTIFICATE: Our company has *developed sophisticated and unique software* for the selection of jack model and number of jacks require for lifting a tank to withstand tank lifting load, snow load, wind load, and seismic load for a particular construction site. The following factors are considered: 1) Tank Diameter (m), 2) Tank Height (m), 3) Tank Weight (MT) not including bottom-shell neither base plate. 4) Number of roof column(s) support (if applicable) & roof weight, 5) Construction site location, 6) Snow Load (MT), 7) 3-Second Gust Wind Speed (Km/h) from the National Building Code, 8) Seismic Geometric Data from the National Building Code.

Note: The information contained in this manual is intended to be accurate. However, the manufacturer retains the rights to make changes in design which may not be include herein.

Revision	June	23	2021
----------	------	----	------

Request Operation Manual: jirizar@jirizar.com